

POWERMAX™ DIRECT FIT PERFORMANCE TURBOCHARGER

2020+ Volkswagen | Audi | Skoda | Cupra | Seat 2.0L EA888 Engine

INSTALLATION SUPPLIMENT


For turbocharger installation please follow the OEM service manual.

Recommendation for elongation of the venturi injector wire heat shroud on Garrett PowerMax turbo installations.




1. Venturi Injector and harness.

Wire heat shroud

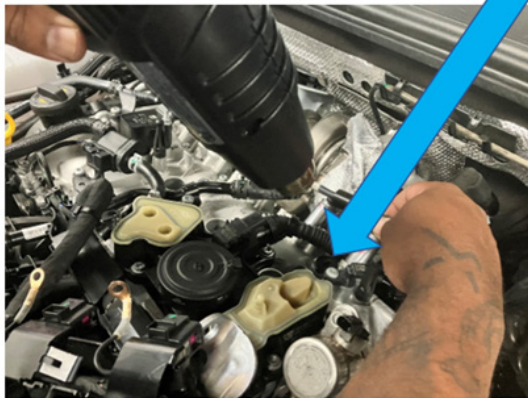

2. To elongate the venturi injector wire heat shroud, apply **gentle** heat approx 2-3 inches (5-15cm) away from the wire heat shroud until shroud can be elongated to desired length.

(Caution: Overheating may result in damage to wire shroud and wires)

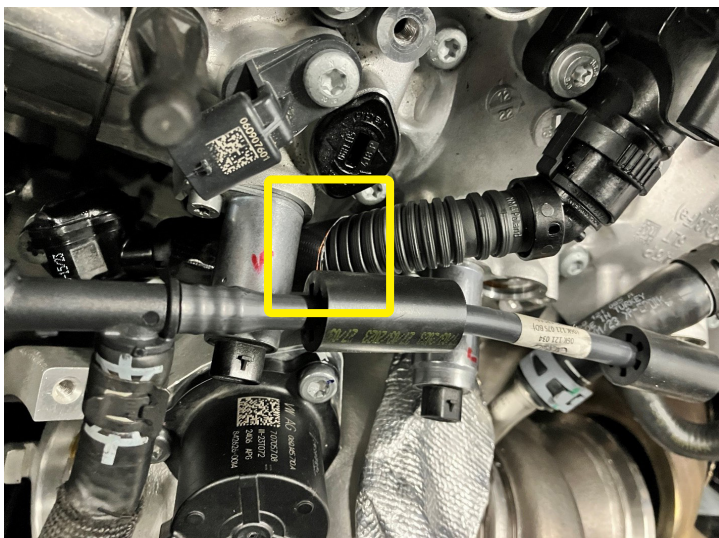

3. Tape should be used in the area where the wire shroud is close to the engine block for wear protection.

Garrett
ADVANCING MOTION